

395-CK001 Quick Connect Kit Assembly Instructions

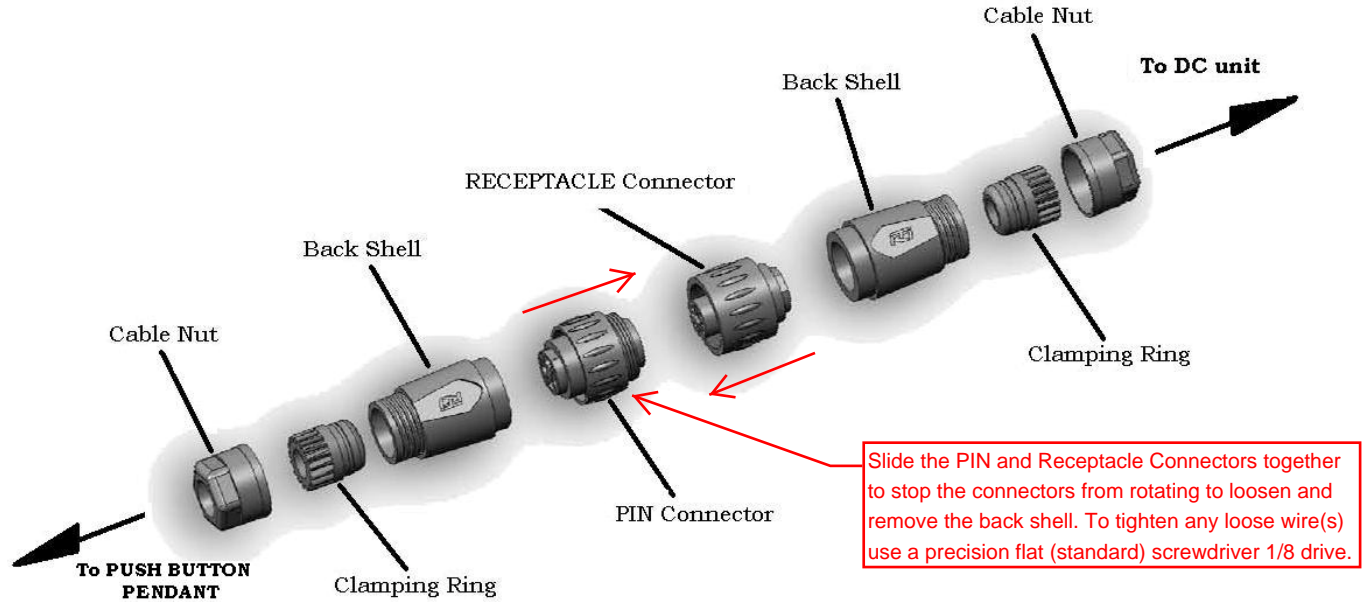


Figure 1

***The PIN Connector is associated with the Push Button Pendant cable.
 The RECEPTACLE Connector is associated with the DC Power Unit cable.***

- **Trailer should be in the fully lowered position.**
- **Disconnect ALL electrical power before proceeding.**
- Remove 1-1/2 inch of jacket from each the Push Button Pendant cable and the Power unit cable.
- Slide the Cable Nut, Clamping Ring & Back Shell onto each cable.
- Strip 3/8 inch of insulation from each of the Red, Green, Black and White wires.
- Assemble each wire to its proper screw and tighten (see Figure 2).
- Assemble the Back Shells onto the PIN and RECEPTACLE Connectors and tighten.

Note: To remove the Back Shell from both Connectors (to expose wires) use the Locating Key to stop the PIN and RECEPTACLE Connector from turning when removing the Back Shell.

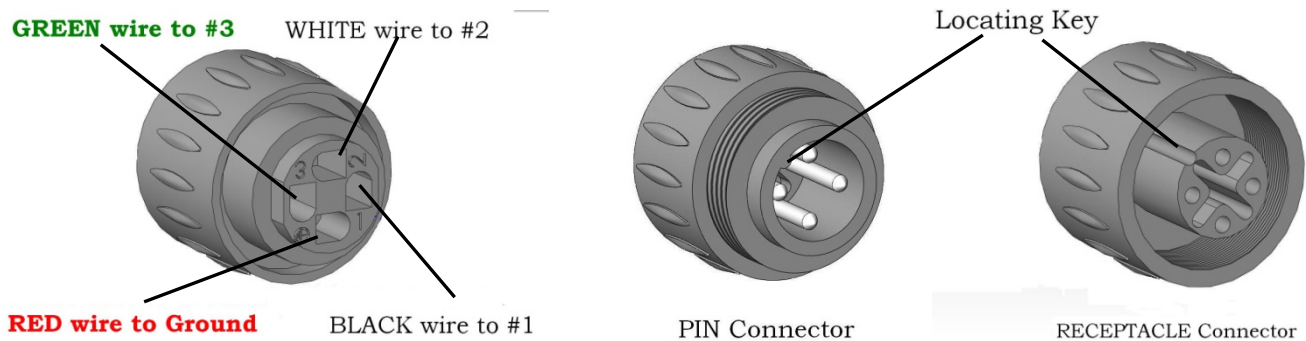


Figure 2